1 Overview

This guide provides phone, soft key, and features descriptions for the Cisco Unified IP Phone models 7921.

Physical Layout

The Cisco Unified IP phone 7921 is a single-line phones.

1	Indicator light (LED)	Provides these indications: • Solid red—Phone is connected to AC power source, and battery is charging. • Solid green—Phone is connected to AC power source, and battery is fully charged. • Fast blinking red—Incoming call. (Phone can be charging or fully charged.) • Slow blinking red—Voice message. (When phone is connected to AC power source, red light displays longer than when using only the battery.) • Slow blinking green—Phone is using only battery power. Phone is registered with the wireless network and is within service coverage area.
2	Headset port	Port for plugging in a headset or ear bud.
3	Speaker button	Toggles the speaker mode on or off for the phone.

4	Right softkey button	Activates the Options menu for access to the list of softkeys. Sometimes displays a softkey label.
5	Navigation button	Accesses these menus and lists from the main screen. Directory Line View Settings Services Allows you to scroll up and down menus to highlight options and to move left and right through phone numbers and text entries.
6	Select button	Activates the Help menu from the main screen. Allows you to select a menu item, a softkey, a call, or an action.
7	Power/End button (red)	Turns the phone on or off, diverts a ringing call to your voice messaging system, or ends a connected call. If there is no voice messaging system, then silences the ring. When using menus, acts as a shortcut to return to the main screen.
8	Pound (#) key	Toggles between locking and unlocking the key pad. Allows you to enter these special characters when you are entering text: **# ? ( ) [ ] { }**
9	Zero (0) key	Enters "0" when dialing a number. Allows you to enter a **space** or these special characters when you are entering text: **, . ‘ “ | _ ~ ’**
10	Asterisk (*) key	Toggles between Ring and Vibrate mode. Allows you to enter these special characters when you are entering text: *** + - / = \ : ;**
11	Keypad	Allows you to dial numbers, enter letters, and choose menu items by number.
12	One (1) key	Enters "1" when dialing a number. Allows you to access the voice messaging system. Allows you to enter these special characters when you are entering text: **! @ < > $ % ^ &**
13	Answer/Send button (green)	Allows you to answer a ringing call or, after dialing a number, to place the call.
14	Left softkey button	Activates the softkey option displayed on the screen.

15	Mute button	Toggles the mute feature on or off.
16	Volume button	When the phone is idle, controls the ring volume, vibrate option, or turns off the ring. During a call, controls the speaker volume for the handset, headset, and speaker mode.
17	Applications button	Used with XML applications, such as Push to Talk or directory services. For more information, see Using Push to Talk Service, page 44.

Phone Screen Features

Because the Cisco Unified Wireless IP Phone 7921G has only two softkeys, the Options softkey displays the list of available feature options for the phone. The features in the Options list change depending on whether the phone is idle or in an active call. This is what your main phone screen looks like with the Options list open.

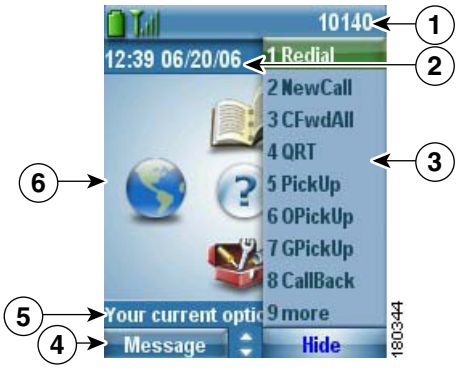

1	Phone Status line	Displays these icons (if active) and your directory number:
		Battery icon—Shows the level of charge in battery
		Signal icon—Shows the degree of signal strength
		Key lock icon—Indicates the keypad is locked
		Speaker icon—Indicates speaker mode is active
		Mute icon—Indicates mute is active
		Headset icon—Indicates headset is plugged in to phone
		Ringer Off icon—Indicates the phone alert is silent
		Vibrate icon—Indicates the phone alert is vibrate only
		Vibrate and ring icon—Indicates the phone alert is ring and vibrate
		Desk Top Charger icon—Indicates the phone is docked in the charger
		Voice Message icon—Indicates you have a voice message
		Application icon—Indicates the application (such as Push to Talk) is active
	10140	Primary phone line—Displays the phone number (directory number) for your primary phone line
2	Date and Time line 12:39 06/20/06	Displays time and date information
3	Options Menu	Displays softkey features for the current call state
4	Softkey labels area Message - Hide	Displays softkey options and provides access to the **Options** list of softkey features
		Displays the active navigation arrows for the menu or screen
5	Status and information Your current options	Provides phone status or instructions
6	Main phone screen	Displays four menu icons and Help

Connecting Your Phone

This section shows how to use the connectors on your Cisco IP phone.

Your system administrator will configure your new Cisco Unified Wireless IP Phone to connect to the corporate wireless network and the IP telephony network.

A rechargeable Lithium ion battery powers the Cisco Unified Wireless IP Phone 7921G. Before you can use your phone, you must install the battery in the phone and then charge the battery. Depending on the type of battery you have, the fully charged battery provides these hours of service:

- The standard battery provides up to 10 hours of talk time or up to 80 hours of standby time.
- The extended battery provides up to 12 hours of talk time or up to 100 hours of standby time.